

Installation Guide for Honda Civic Type R & Acura Integra Type S PNs: 140927, 140927CB, 140927CFBA, 140986, 140986CB, & 140986CFBA



***** Please compare the parts in the box with the bill of materials provided *****
to assure that you have all the parts necessary for this installation.

These instructions have been written to help you with the installation of your Borla Performance exhaust system. Please read this document completely before beginning the installation of your system.

To ensure this part number fits your specific model year, please visit our website for the latest model year listings at www.BORLA.com

Thank you for purchasing a Borla Performance Cat-Back™ exhaust system.

Borla Performance Cat-BackTM exhaust system PNs 140927, 140927CB and 140927CFBA are designed for the Honda Civic Type R, equipped with a 2.0L turbo-charged inline-4 engine and FWD manual transmission.

Borla Performance Cat-BackTM exhaust system PNs 140986, 140986CB and 140986CFBA are designed for the Acura Integra Type S, equipped with a 2.0L turbo-charged inline-4 engine and FWD manual transmission.

Borla Performance Industries recommends that an exhaust shop or professional after market parts installer, who has all the necessary equipment, tools and experienced personnel needed for proper installation, should perform the installation of this system. However, if you decide to perform the installation, we recommend someone should help you. Ensure the installer uses all under car safety precautions including eye protection.

Please take time to read and understand the following...

By installing your Borla Performance exhaust system, you indicate that you have read this document and you agree with the terms stated below.

It is the responsibility of the purchaser to follow all installation instruction guidelines and safety procedures supplied with your Borla Performance exhaust system.

Borla Performance Industries assumes no responsibility for damages occurring from misuse, abuse, improper installation, improper operation, lack of responsible care, or all previously stated reasons resulting from incompatibility with other manufacturer's products and/or systems.

Included with your Borla Performance exhaust system is a warranty card. Please read it carefully before you begin any work on your vehicle. If you should have any questions regarding our warranty policy, installation, or any other matter pertaining to your new Borla Performance exhaust system, please give us a call at the number provided on the warranty card.





Minimum Required Tool List:

1. 3/8" drive ratchet

TOOLS:


- 2. 3/8" drive extension 6"
- 3. 8mm deep well socket
- 4. 10mm deep well socket
- 5. 14mm deep well socket

- 6. 15mm deep well socket
- 7. Pry bar

SHOP SUPPLIES:

1. Spray lubricant

Borla Performance - Bill of Materials

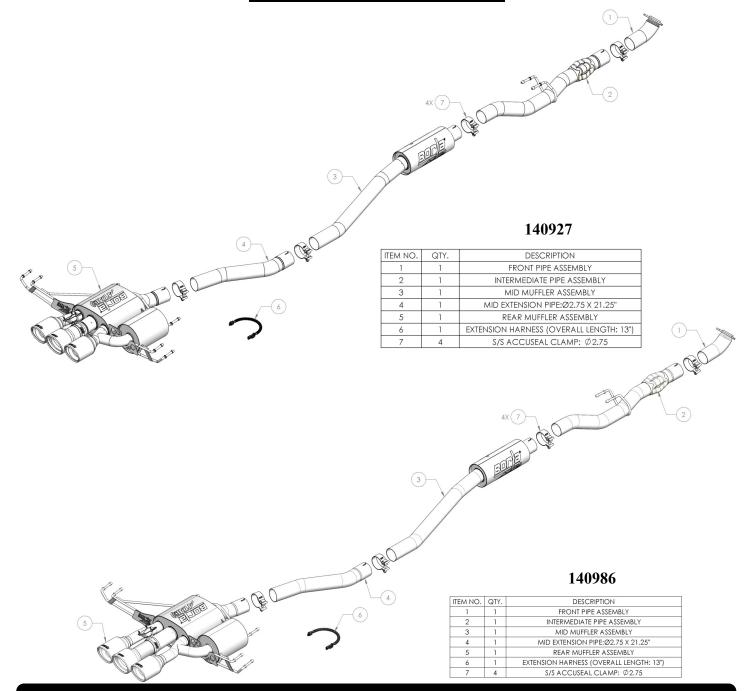





Caution!!! <u>Never</u> work on a hot exhaust system. Serious injury in the form of burns can result If the vehicle has been in use and the exhaust system is hot, allow vehicle to cool for at least 1 hour. Always wear eye protection when working under any vehicle.

Note: It is our recommendation that you use a hoist or hydraulic lift to facilitate the installation of your new Borla Performance Exhaust System.

Taking all under car safety precautions, lift the vehicle using a hoist or hydraulic lift. Once this has been done, you may begin the removal of your old exhaust system from your vehicle.


Note: Before removing the original exhaust system from your vehicle, please compare the parts you have received with the bill of materials provided on the previous page to assure that you have all the parts necessary for the installation of your new Borla Performance Exhaust System.


Note: With a used vehicle, we suggest a penetrating spray lubricant to be applied liberally to all exhaust fasteners and allowing a significant period of time for the chemical to lubricate the threads before attempting to disassemble.

Original Exhaust System Removal

- 1. Lubricate all hangers, rubber isolators, bolts and nuts.
- 2. Loosen and remove the hardware connecting the exhaust underbody cover to the vehicle and remove the cover from the vehicle (Fig. 1). Save this hardware for reinstallation of your original cover.
- 3. Remove the electrical plug and locating tab from the valve actuator and plate (Fig. 2).
- 4. Loosen and remove the hardware connecting the exhaust to the vehicle (Fig. 3). Save this hardware for installation of your Borla system.
- 5. Using a flathead screwdriver or a prybar, remove the mid section assembly hangers from their rubber isolator (Fig. 4).
- 6. Using a flathead screwdriver or a prybar, remove the rear muffler assembly hangers from their rubber isolators and remove the entire exhaust assembly from the vehicle (Fig. 5).
- 7. Loosen and remove the hardware connecting the valve actuator to the exhaust (Fig. 6). Save this hardware and actuator for installation of your Borla system.
- 8. Not pictured: Remove the gasket from the original flange. <u>Save this gasket</u> for installation of your Borla system.



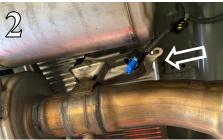

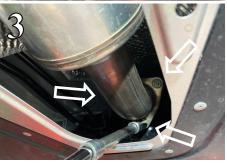









Borla Performance Cat-Back TM **Exhaust System Installation**

- 1. Orient components on shop floor according to Borla bill of materials drawings on page 2.
- 2. Install the original gasket to the flange of the **Front Pipe Assembly** (Fig. 7).
- 3. Install **Front Pipe Assembly** by mating the flange to the vehicle. Loosely tighten the original hardware on the flange (Fig. 8).
- 4. Place a clamp over the expanded end of the **Intermediate Pipe Assembly** and insert the inlet to the **Front Pipe Assembly**. Insert the hangers into their original rubber isolators (Fig. 9). <u>Do not tighten the clamp</u>.
- 5. Place a clamp over the expanded end of the **Mid Muffler Assembly** and insert the inlet to the **Intermediate Pipe Assembly** (Fig. 10). <u>Do not tighten the clamp.</u>
- 6. Place a clamp over the expanded end of the **Mid Extension Pipe** and insert the inlet to the **Mid Muffler Assembly** (Fig. 11). <u>Do not tighten the clamp.</u>














Borla Performance Cat-Back TM Exhaust System Installation Cont'd

- 7. Connect the **Extension Harness** to the original valve electrical connector and feed it up and over the original heat shield (Fig. 12).
- 8. Not pictured: Install the original valve actuator onto the valve of the **Rear Muffler Assembly** with the original hardware. Make sure that the spring on the actuator matches up with the slots on the top of the valve.
- 9. Place a clamp over the expanded end of the **Rear Muffler Assembly** and insert the inlet to the **Mid Extension Pipe**. Insert the hangers into their original rubber isolators (Fig. 13). <u>Do not tighten the clamp.</u>
- 10. Connect the **Extension Harness** to the valve actuator and slide the locking clip into place (Fig. 14).
- 11. Once position has been determined to be correct, tighten the hardware on the **Front Pipe Assembly** and then tighten the Accuseal clamps to 32-35 ft. lbs.
- 12. Install your original exhaust underbody cover using the original hardware (Fig. 15).
- 13. Before starting your vehicle, make sure to check all wires, hoses, brake lines, body parts and tires for safe clearance from the exhaust system.
- 14. Start the vehicle and check for any leaks. If any leaks are found, determine cause (such as loose or incorrectly positioned clamp) and repair as necessary.



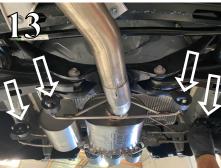





WARNING: Use extreme caution during installation. Torque all fasteners according to manufacturer's torque values and tightening sequence. <u>DO NOT</u> use air impact tools to tighten fasteners on Borla Performance Exhaust Systems. Use of such tools may result in bent flanges or gasket contact areas leading to exhaust leaks.

NOTE: When you first start your vehicle after the installation of your new Borla Performance Exhaust System, there may be some smoke and fumes coming from the system. This is a protective oil based coating used in the manufacturing of mandrel bent performance exhaust tubing. This is not a problem and will disappear within a very short period of time after the exhaust has reached normal operating temper-

