

2007-2008 Hummer H2 Exhaust System Installation



Precision manufactured using high quality austenitic stainless steel; this system is designed to endure years of heavy use. Installing a Borla Performance Exhaust System on your vehicle will eliminate the restrictive design of the stock exhaust, allowing your engine to discharge exhaust gas easier. The result is more horsepower and torque, longer engine life, and a distinctive throaty growl- all this, with easy bolt-on installation. These installation instructions have been written to help you in the installation of your Borla Performance Exhaust System. Please read it completely before installing your system.

Thank you for purchasing a Borla Performance Cat-Back™ Exhaust System.

Borla Performance Cat-Back™ Exhaust System (Part number 140258) has been designed for the 2007-2008 Hummer H2, equipped with a 6.0L or 6.2L V8 engine, all-wheel drive and automatic transmission.

Borla Performance Industries recommends that an exhaust shop or professional after market parts installer, who has all the necessary equipment, tools and experienced personnel needed for proper installation, should perform the installation of this system. However, if you decide to perform the installation, we recommend someone should help you. Ensure the installer uses all under car safety precautions including eye protection.

Please take time to read and understand the following...

By installing your Borla Performance Exhaust System, you indicate that you have read this document and you agree with the terms stated below.

It is the responsibility of the purchaser to follow all installation instruction guidelines and safety procedures supplied with your Borla Performance Exhaust System

Borla Performance Industries assumes no responsibility for damages occurring from misuse, abuse, improper installation, improper operation, lack of responsible care, or all previously stated reasons resulting from incompatibility with other manufacturer's products and/or systems.


Included with your Borla Performance Exhaust System is a warranty card. Please read it carefully before you begin any work on your vehicle. If you should have any questions regarding our warranty policy, installation, or any other matter pertaining to your new Borla Performance Exhaust System, please give us a call at the number provided on the warranty card.

Minimum Required Tool List:**TOOLS:**

- 1 3/8" Drive Ratchet
- 2 15mm Socket
- 3 15mm Combination Wrench
- 4 Pry Bar
- 5 Reciprocating Saw / Hack Saw

SHOP SUPPLIES:

- 1 Spray Lubricant

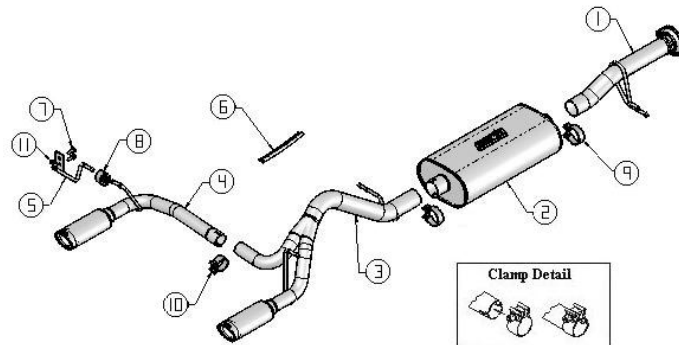Borla Performance Cat-Back™ Bill of Materials

1. Front pipe
2. Muffler assembly
3. R-H tail/y-pipe assembly
4. L/H tail pipe assembly
5. Hanger/bracket assembly
6. Heat shield
7. Bolt (qty 2)
8. Rubber bracket
9. 3.00" clamp (qty 2)
10. 2.25" clamp
11. Nut (qty 2)

Caution!!! Never work on a hot exhaust system. Serious injury in the form of burns can result If the vehicle has been in use and the exhaust system is hot, allow vehicle to cool for at least 1 hour. Always wear eye protection when working under any vehicle.

Note: It is our recommendation that you use a hoist or hydraulic lift to facilitate the installation of your new Borla Performance Cat-Back™ Exhaust System.

Taking all under car safety precautions, lift the vehicle using a hoist or hydraulic lift. Once this has been done, you may begin the removal of your old exhaust system from your vehicle.

Note: Before removing the original exhaust system from your vehicle, please compare the parts you have received with the bill of materials provided on the previous page to assure that you have all the parts necessary for the installation of your new Borla Performance Cat-Back™ Exhaust System.

Original Exhaust System Removal

Note: With a used vehicle, we suggest a penetrating spray lubricant to be applied liberally to all exhaust fasteners and allowing a significant period of time for the chemical to lubricate the threads before attempting to disassemble.

1. Using a reciprocating saw or hack saw, cut the exhaust just behind the muffler assembly as shown in figure 1.
2. Lubricate all the hangers and rubber isolators.
3. Remove the hanger located on the tail pipe from the rubber isolator and remove the tail pipe assembly from the vehicle.
4. Unbolt the flange shown in figure 2 located in front of the muffler assembly. Place the hardware to the side for use during the installation of you new exhaust system.
5. Using a muffler stand or an additional person to hold the remaining exhaust system up into position, remove all the hangers from the rubber isolators and remove the remaining exhaust from the vehicle.

Warning: Use extreme caution during installation. Torque all fasteners according to manufacturer's torque values and tightening sequence. DO NOT use air impact tools to tighten fasteners on Borla Performance Exhaust Systems. Use of such tools may result in bent flanges or gasket contact areas

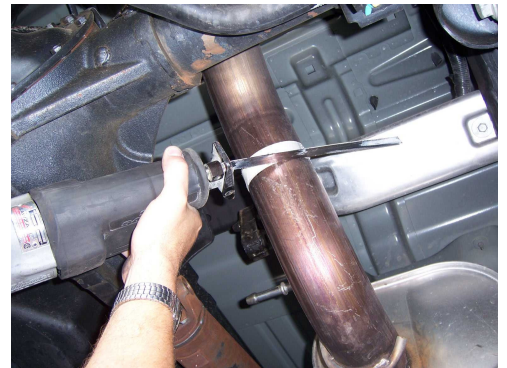


Figure 1



Figure 2

Borla Performance Cat-Back™ Exhaust System Installation

1. Using the original hardware, place the front pipe into position as shown in figure 3. Making sure to install the hanger into the rubber isolator. Hand tighten the hardware for now.
2. Place a clamp over an expanded end of the muffler and set it up into position as shown in figure 4. **Do Not** tighten the clamp.
3. Place a clamp over the expanded outlet of the muffler and set the right tail/y-pipe assembly into position making sure to install the hanger into the rubber isolator. **Do Not** tighten the clamp.
4. Using the hardware provided, install the hanger/bracket assembly on the vehicle just to the left side of the driver side frame rail as shown in figure 5. Install the rubber isolator provided onto the hanger as also shown in figure 5.
5. Place a clamp over the expanded end of the left hand tail pipe assembly and set it into position as shown in figure 6 making sure to install the hanger into the rubber isolator. **Do Not** tighten clamp.
6. For air bag equipped vehicles, install the heat shield provided over the air lines located on the passenger side at the rear of the vehicle.
7. Check your exhaust system for proper clearance under the vehicle and also for tip alignment.
8. Once position has been determined to be correct, tighten the Accuseal™ clamps to 32-35 ft. lbs. making sure the clamp opening is not over any of the notches in the pipe. Tighten the flange hardware to 18-22 ft. lbs.
9. Before starting your vehicle, make sure to check all wires, hoses, brake lines, body parts and tires for safe clearance from the exhaust system.
10. Start vehicle and check for any leaks. If any leaks are found, determine cause (such as loose hardware or incorrectly positioned clamp) and repair as necessary.

Note: When you first start your vehicle after the installation of your new Borla Performance Exhaust System, there may be some smoke and fumes coming from the system. This is a protective oil based coating used in the manufacturing of mandrel bent performance exhaust tubing. This is not a problem and will disappear within a very short period of time after the exhaust has reached normal operating temperatures.

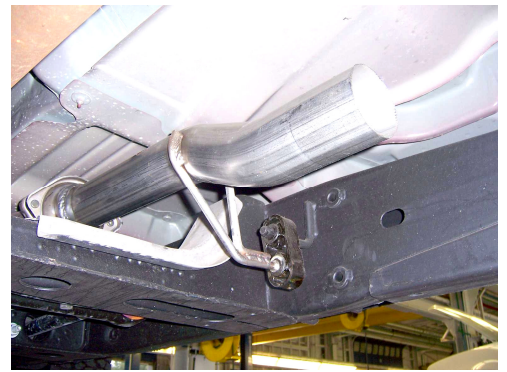


Figure 3



Figure 4



Figure 5



Figure 6